


## Quick guide — — Overview buttons and guidance screen

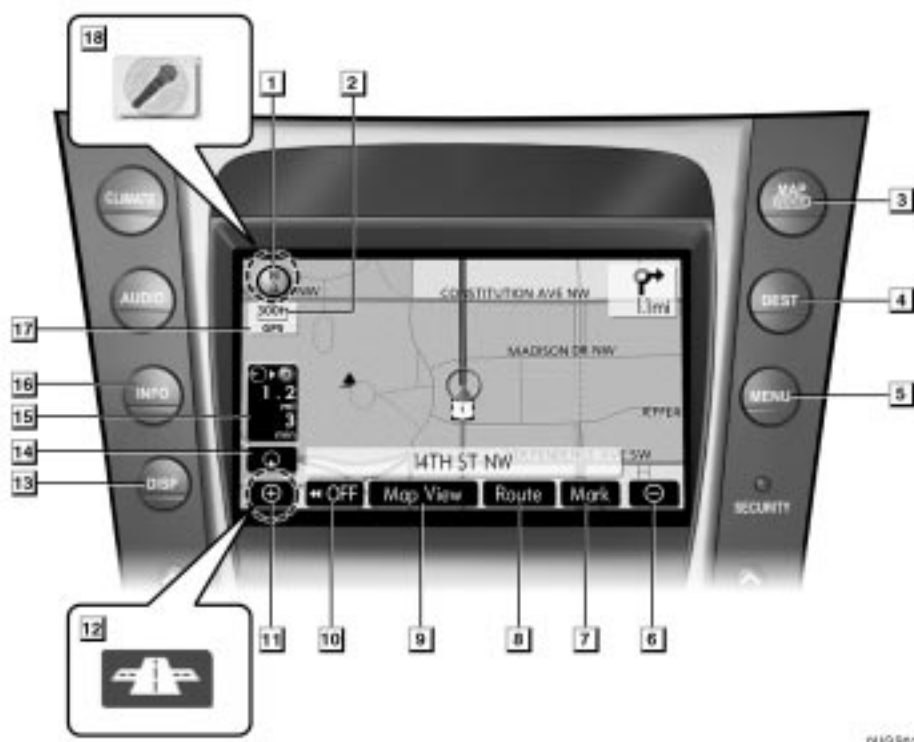

0UG881

No.	Name	Function	Page
1	<b>North-up or heading-up symbol</b>	This symbol indicates a map view with north-up or heading-up. Touching this symbol changes the map orientation.	16
2	<b>Scale indicator</b>	This figure indicates the map scale.	14
3	<b>“MAP/VOICE” button</b>	Push this button to repeat a voice guidance, cancel one touch scroll, start guidance, and display the current position.	8, 48
4	<b>“DEST” button</b>	Push this button to display the “Destination” screen.	xi, xii, 18, 19
5	<b>“MENU” button</b>	Push this button to display the “Menu” screen.	vii, ix, 64, 66, 67, 68, 70, 83, 126

No.	Name	Function	Page
<b>6</b>	<b>Zoom out touch-screen button</b>	Touch this button to reduce the map scale.	14
<b>7</b>	<b>“Mark”</b>	Touch this button to register the current position or the cursor position as a memory point.	9
<b>8</b>	<b>“Route”</b>	Touch this button to change the route.	50, 52
<b>9</b>	<b>“Map View”</b>	Touch this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	56, 59, 60, 61
<b>10</b>	<b>“◀◀OFF”</b>	Touch this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by touching “ON▶▶”.	86
<b>11</b>	<b>Zoom in touch-screen button</b>	Touch this button to magnify the map scale.	14
<b>12</b>	<b>Foot print map touch-screen button</b>	Touch this button to display the foot print map and the building information.	15
<b>13</b>	<b>“DISP” button</b>	Push this button to display the “Display” screen.	108
<b>14</b>	<b>Screen configuration touch-screen button</b>	Touch this button to change the screen mode.	12
<b>15</b>	<b>Distance and time to destination</b>	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	49
<b>16</b>	<b>“INFO” button</b>	Push this button to display the “Information” screen.	2, 96, 99, 109, 111
<b>17</b>	<b>“GPS” mark (Global Positioning System)</b>	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	114
<b>18</b>	<b>Speech command system indicator</b>	The microphone is shown by pushing the speech command switch. The speech command system can be operated while this indicator is shown.	103

## — Registering home



1 Push “MENU” button.



2 Touch “My Places”.




3 Touch “Register” of the home.




4 There are 12 different methods to search your home.

See “Destination search” on page 19.

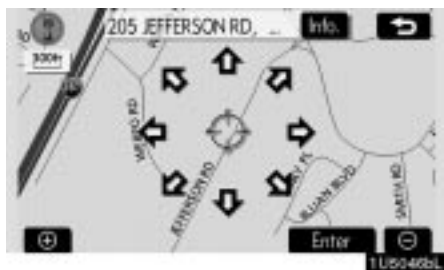

**5 Touch “Enter”.**

The “Memory Point” screen is displayed.

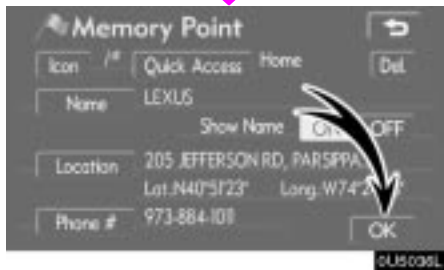

**6 Touch “OK”.**

Registration of home is complete.  
You can change the icon, quick access, name, location and phone number. (See “ — Editing memory points” on page 72.)

## — Registering preset destinations



1 Push "MENU" button.



2 Touch "My Places".




3 Touch "Register" of the memory points.



4 There are 13 different methods to search preset destinations.

See "Destination search" on page 19.

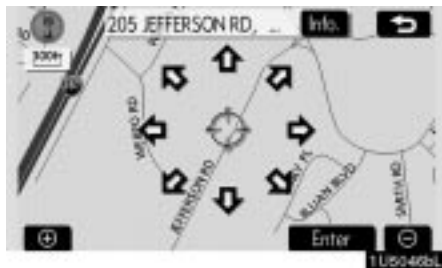

**5 Touch “Enter”.**

The “Memory Point” screen is displayed.



**6 Touch “Quick Access”.**



**7 Touch one of preset buttons 1 to 5.**



**8 Touch “OK”.**

Registration of preset destinations is complete.

You can change the icon, quick access, name, location and phone number. (See “— Editing memory points” on page 72.)

## — Operation flow: guiding the route



**1** Push “DEST” button.



**2** There are 13 different methods to search destinations.

See “Destination search” on page 19.



**3** Touch “Enter”.

The navigation system performs a search for the route.



**4** Touch “Guide”, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 38.)

**5** Guidance to the destination is given via voice and on the guidance screen.


## — Setting home as the destination



1 Push "DEST" button.



2 Touch .

The  can be used if your home has been registered. (To register "Home", see "— Registering home" on page 77.)



3 Touch "Enter".

The navigation system performs a search for the route.



4 Touch "Guide", and start driving.

Routes other than the one recommended can also be selected. (See "Starting route guidance" on page 38.)

5 Guidance to the destination is given via voice and on the guidance screen.